


1-4MAC DALI-2 application controller

Feature

- Multi-Master DALI-2 application controller, support for event messages from input devices
- ♦ The MAC1-4 feature 1, 2, or 4 independent DALI line, cross DALI line control on each MAC1-4
- Up to 64 DALI-2 based luminaries per DALI line can be controlled individually or via 16 groups. In addition up to 64 DALI-2 input devices are supported per DALI line.
- Independent lighting control for up to 32 zones on each MAC1-4, up to 16 scenes and 16 schedules on each zone.
- Linkage lighting control for up to 8 MAC1-4 which link with ethernet, zones maybe control gears cross MAC1-4
- Built-in DALI power supply with guaranteed supply current of 230 mA.
- ♦ 10/100 TCP/IP Ethernet, DHCP supported.
- RS485 interface (depending on the license) could be config as MODBUS master or slave.
- ♦ Simple setup via APP.
- 3 years limited guarantee.+



Wiring

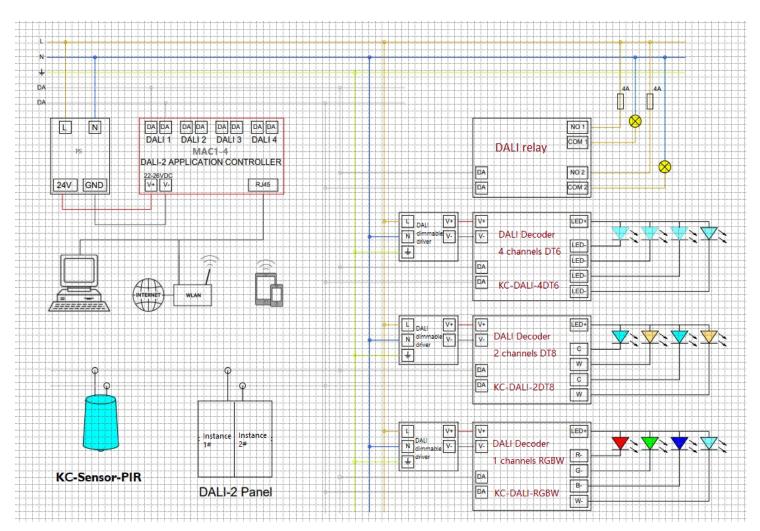




1-4MAC DALI-2 application controller

Specifications

| Type | KC-DALI-1MAC | KC-DALI-2MAC | KC-DALI-4MAC |
|----------------------|--|--------------|----------------------|
| DALI | IEC62386-101:2018,IEC62386-102:2018,IEC62386-103:2018 | | |
| DALI lines | 1 | 2 | 4 |
| DALI power supply | Power supply with guaranteed supply current of 230 mA | | |
| DALI group | 16 groups per DALI line | | |
| Zones | 16 | 32 | 32 |
| Scenes | 16 per zone | | |
| Schedules | 16 per zone, support Day and Week modes. | | |
| Ethernet interface | 10/100M Base-T, DHCP supported. | | |
| RS485 | MODBUS-RTU master or slave supported. | | |
| Power | 22~26VDC, max. 500mA | | 22~26VDC, max. 700mA |
| Mounting | DIN rail mounting, 35 mm | | |
| Dimensions | 108(L)X88(W)X65(H)mm | | |
| Operating conditions | -20°C ~45°C, 10–90 % RH, noncondensing, degree of protection: IP40, IP20 (terminals) | | |
| Storage conditions | -40°C∼55°C, 10–90 % RH, noncondensing | | |

Dimensions

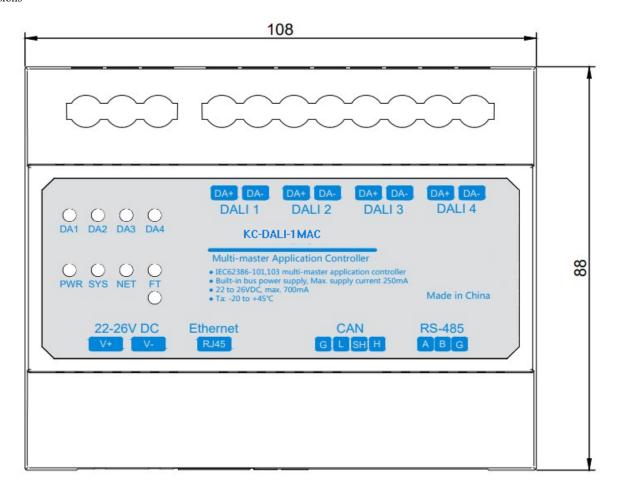




1-4MAC DALI-2 application controller

Device LED

| LED | Description | | |
|--------|---|--|--|
| PWR | Green after power on, Off when no main power. | | |
| SYS | Green when Fault-free operation Red: invalid license, Serious internal error | | |
| NET | Green, flashing on/off every 0.5 s: IP assigning by DHCP Green: Fault-free operation, DHCP mode | | |
| | Yellow: Fault-free operation, STATIC IP mode | | |
| | Red, unplug cable or ethernet unavailable | | |
| DALI X | Red: DALI line short-circuited, or system failure with external DALI PS | | |
| | Green: Fault-free operation with built-in DALI PS | | |
| | Yellow: Fault-free operation with external DALI PS | | |
| | Green or yellow, intermittently flickering: assigning short address | | |

Function Key

After pressing the FT button, the following functions will be triggered when released as shown in the figure below

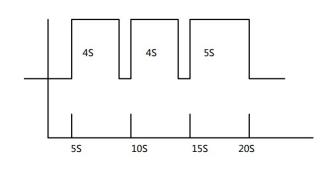

| Release phase | Function | | |
|--------------------------------------|------------------------------------|--|--|
| 5 ~ 9s (FT LED yellow flickering) | Reset the IP mode to DHCP | | |
| 10 ~ 14s (FT LED blue flickering) | Disable or enable built-in DALI PS | | |
| 15 ~ 20s (FT LED red flickering) | Reset administrator password | | |
| other (FT LED green) | No actions | | |

Safety instructions /!



- The MAC13x may only be used for the specified area of application, relevant health and safety regulations must be observed.
- The power supply must be disconnected when the device is being assembled and installed.
- Only qualified personnel may assemble, install and commission the device.
- DALI signals are not SELV. Therefore the same procedures should be applied as working with mains voltage!
- The power supply is 24±2V DC, other main supply could damage the device.
- DALI interface in MAC13x do not support overvoltage protection, other signal or voltage must not connect to DALI interface, Otherwise maybe damage the MAC13x.